



Sloped Wine Rack Assembly Instructions

STEP 1

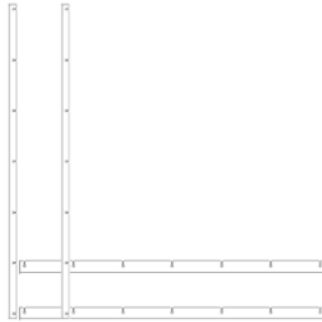


Assemble the bottom metal frame on a flat surface.
Start from **the longest** metal piece

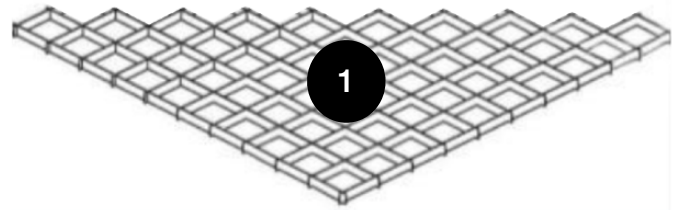


STEP 2

Line up and insert the wood rack pieces into the metal frame. Use a rubber mallet to install into the metal cross frame.
Start from the corner (the longest metal piece)

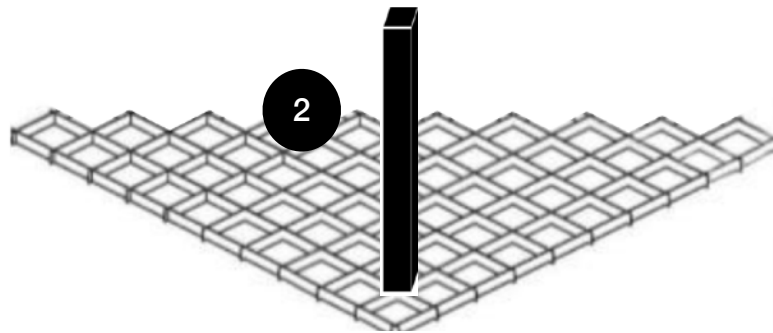


STEP 3

Insert one section of the metal frame only half way down into the wood pieces.

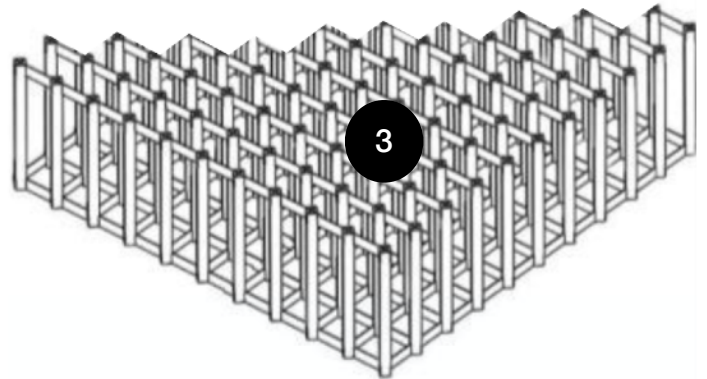

STEP 4

Insert the 2nd section of the metal frame into the 1st and using a rubber mallet complete the installation into the wood pieces.

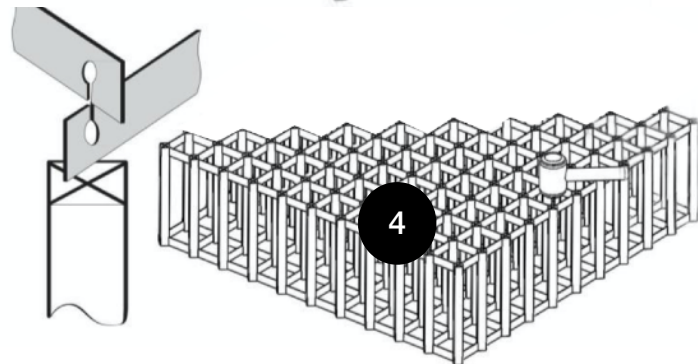

STEP 5

The bottle neck protector snap onto the front side of the metal frame.

